

bea-fon SL140



General Information

Congratulations on the purchase of your Bea-fon SL140!

Please read this information before using the phone to make a better use of your phone. We are not responsible for any damage due to your misunderstanding of this information and misacting.

We are endeavouring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-

supported features. Please contact your network operator for further information.

Please check the package contents to ensure that all components listed below are included. If the product is defective or if there is a component missing, immediately contact the retailer where you purchased this handset.

General Information

Your Bea-fon SL140 box contains:

- 1 mobile phone (*SL140*)
- 1 desktop charger (*SL140*)
- 1 travel charger (*SL140*)
- 1 battery (*SL140*)
- User manuals (*SL140*)

If you find the size of the script not easily readable for you, you can also find this manual on our website, where you will be able to adjust the size of the script.

Go to: www.beafon.com/Products

Device Code:

This device code ensures that unauthorized persons will not be able to use your phone. The default code is **0000**

PIN-Code:

The PIN-code was supplied to you by your network operator together with your SIM card and/or adjusted/set up by yourself.

Directory

General Information	2
Device Code:	4
PIN-Code:	4
Directory	5
Your Phone	8
Getting started.....	10
What is a SIM card?	10
<i>Insert the SIM card</i>	10
Insert the battery as follows:.....	11
Charging the battery	12
Switching the telephone on or off	14
Display (Standby mode).....	16
Screen icons:.....	16
Menu Operation	18
Connect an optional headset.....	19
Call function	20
Make a call	20
Make a call using the phone book.....	20
Answering a call:	21
Operations during a call	21
<i>Hands Free:</i>	22
Menu	22
Phonebook	24
<i>To access the phonebook:</i>	24
<i>Add new contact:</i>	24
<i>To edit (change) a Phone Book entry:</i>	25

<i>To delete all entries from the phone or SIM card</i>	25
<i>Store a Phonebook entry to a Speed dial key (2-9)</i>	26
<i>Direct Number:</i>	26
<i>Favorite contacts</i>	26
Messages	27
<i>Write message</i>	27
<i>Inbox:</i>	28
<i>Outbox:</i>	28
<i>Drafts:</i>	29
<i>Sent messages</i>	29
<i>Settings</i>	29
<i>SMS Settings</i>	29
<i>Voice mail:</i>	30
Call history	32
Missed Dialed and Received or All calls	32
Delete call logs:	32
Organizer	33
Alarm	33
Tasks.....	34
Calculator:	34
FM-radio	35
FM-Radio.....	35
Settings	37
Tone settings:	37
SOS	37
SOS description:	38

SOS setting:.....	40
Phone settings:.....	40
<i>Time and date:</i>	40
<i>Language:</i>	40
<i>Pref. Input method:</i>	40
<i>Wallpaper:</i>	41
<i>Brightness:</i>	41
Call settings	41
<i>Caller ID:</i>	41
<i>Call waiting:</i>	41
<i>Call divert:</i>	42
<i>Call barring:</i>	42
<i>Call time reminder:</i>	42
Network settings	42
<i>Network selection:</i>	43
Security settings	43
Connectivity:	44
Bluetooth:	44
<i>Visibility:</i>	44
<i>My device:</i>	44
<i>Search audio device:</i>	44
<i>My Name:</i>	45
Restore factory settings	45
Basic Specifications	46

Your Phone



1	Direct dialing number M1
2	Main menu key left menu key
3	Dialing History Calls
4	* Key, Press this button on the idle screen to enter the following symbols : * /+ /P / W.
5	Loudspeaker
6	Write message key
7	Direct dialing number M2
8	Contact menu key right menu key
9	Power on/off End key
10	4 Navi key navigation: Arrow key up: <i>On the idle screen this button takes you to the</i>

	<p><i>Messages menu.</i></p> <p>Arrow key right: <i>On the idle screen this button takes you to the Alarm menu.</i></p> <p>Arrow key down: <i>On the idle screen this button takes you to the Favorite contacts.</i></p> <p>Arrow key left: <i>On the idle screen this button takes you to the Calendar menu.</i></p>
11	# Key, Long press can switch between in silent mode with general modes; In edit mode, change the input method.
12	SOS button
13	Polyphone loudspeaker
14	Microphon
15	Charger port
16	PIN Connection to Cradle charger
17	LED Flashlight

Getting started


What is a SIM card?

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.


Keep the SIM card away from children. The SIM card can easily be damaged or bent. You should therefore handle the SIM card with care during installation and/or removal.

Insert the SIM card

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.

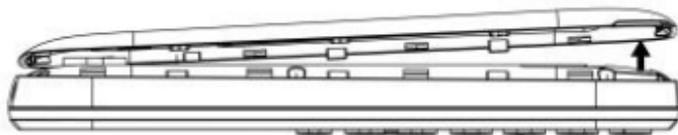


3. If the battery is already inside, remove it.
4. Slide the SIM card carefully into the SIM card slot. Make sure that the gold-coloured connectors on the SIM card are facing downwards and that the bevelled corner is on the right.

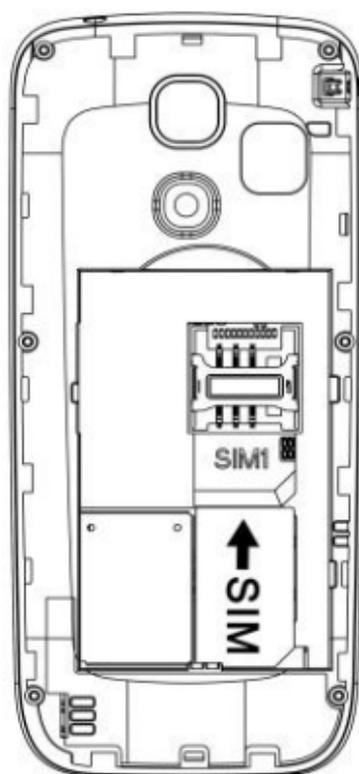

Insert the battery as follows:

1. Insert the battery by aligning the gold contacts in the battery compartment on the phone.
2. Push down on the upper section of the battery until it 'clicks' into place.
3. Close the battery compartment by sliding the cover closed until you hear a 'click'.

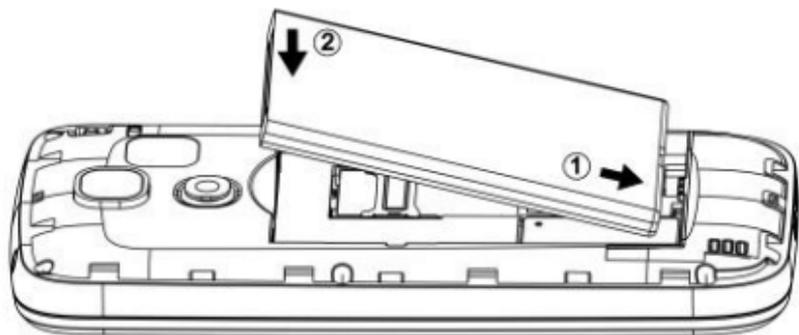

Charging the battery


There are two ways of SL140 battery charging:

- A. Desktop charging
- B. Travel charging

The lithium battery of the mobile phone can be immediately used after unpacking.

A new battery, is not fully charged, and performs best after performing a full charge/discharge 3 times:

1. Plug the charger into the charger connector.
2. Plug the other end into an electrical outlet.

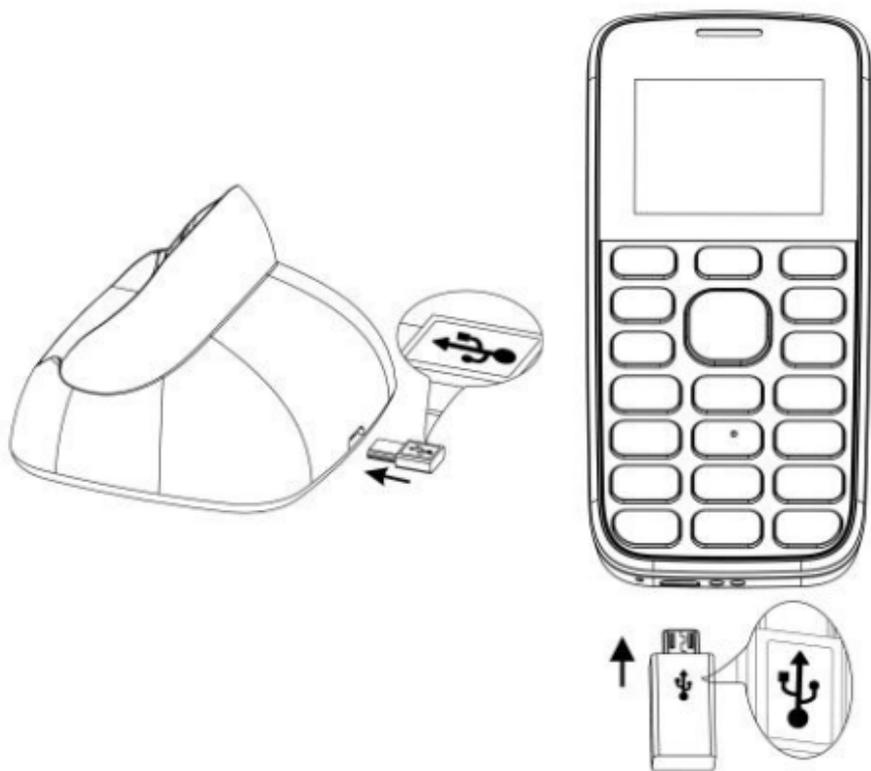

3. The phone may need several hours for reaching a fully charge.

When your phone is power off, it might take a few seconds to show

charging display and it shows charge complete when finished.

When your phone is power on, the battery icon flickers when it starting charging and become still with full bars in battery icon when finished.

4. The battery is fully charged when the red LED is off. Disconnect the charger from the phone and the AC outlet.

Note: Charge the battery for at least 12 hours before using the phone for the first time.

Switching the telephone on or off

Make sure that you SIM card is in your mobile phone and that the battery is charged.

1. Press the **red key** to switch the phone on.
2. If prompted, choose your language and press **OK**.
3. If you have entered a PIN-code before, the phone will ask for the code now. Enter the PIN-code and confirm by pressing **OK**.
4. To turn off your phone, press and hold the **red key** for two seconds.

If you don't insert a SIM card, your phone shows *Insert SIM*. None of the functions related to SIM card can be used. You can make an emergency call only.

Note: If you enter an incorrect PIN-code 3 times in succession, the phone will require you to enter the PUK-code. You received this PUK-code together with your SIM card.

Display (Standby mode)

1	2	3
4		
5		
6	7	

- | | |
|-------------------|-----------------|
| 1. Signal status | 5. Time |
| 2. Pictograms | 6. Date and day |
| 3. Battery status | 7. Menu |
| | 8. Names |

Screen icons:

	Signal Strength <i>The vertical bars show the network connection strength. SIM card has signals.</i>
	New messages <i>This icon shows when you receive a new message.</i> SIM Card has an unread message <i>The inbox is full.</i> <i>This icon flickers when the inbox is full and you need to delete messages to receive new messages.</i>

	<p>Earphone <i>This icon shows when you plug the earphone in. Voice will be heard from the earphone.</i></p>
	<p>Missed Calls <i>This icon shows when you are viewing the missed call. SIM card has a missed call.</i></p>
	<p>Alert Type <i>Ring</i> <i>Silent mode on and Vibration only</i> <i>Vibrate and ring</i></p>
	<p>Call Divert <i>This icon shows when you divert all calls unconditionally. SIM card has been set up call divert.</i></p>
	<p>Turn alarm on <i>This icon shows when you turn alarm on.</i></p>
	<p>Roaming <i>This icon shows when your phone is in roaming state. SIM card is roaming.</i></p>
	<p>Bluetooth <i>This icon shows when the Bluetooth is active.</i></p>
	<p>Battery capacity <i>This icon's colour changes</i></p>

according to the status of battery

capacity: 

Menu Operation

Menu lists are used for set up and operation.

The left and right soft keys initially are *Menu* () and *Phonebook* (). (Note: symbols not displayed if the analogue style clock is set for idle mode.)

Press *Menu* () and the display changes and the soft keys become *OK* and *Back*.

Use *Up* or *Down* to move up or down menu lists, and *OK* or *Back* for the next or previous display.

When writing text, use the # key to switch cases:

Upper case (ABC), Lower case (abc) or Numerals (123). Use Up or Down to move the cursor,

Clear to delete letters and the * key for symbols/punctuation.

Connect an optional headset

You can use a headset (not supplied) with the micro USB type, plugged into the Headset socket on the bottom side of the handset.

When using headsets, including Binatone approved ones, pay attention to volume levels and read its user guide for safety instructions.

Call function

Make a call

1. To make a call, enter the phone number with the prefix and press the **green key**. For international calls, enter '+' by pressing * for 2 sec. Then enter the country code followed by the telephone number, in which the 0 of the prefix must be dropped.
2. If you have entered a wrong number, press the soft key 'right' *Clear* to remove the number to the left of the blinking cursor.
3. Press the **green key** to call the number.
4. Press the **red key** to end the call or to cancel the call attempt.

Make a call using the phone book

If you have saved a name and number in the phone book, you can also use the phonebook to make a call.

In standby mode, press the soft key 'right' to go to *Phonebook*.

1. Scroll with the up and down arrow key to the name you want to call.

2. Press the *green key* to call the number.
3. Press the *red key* to end the call or to cancel the call attempt.

Answering a call:

When there is an incoming call, the phone rings and/or vibrates and shows the number or the corresponding name.

1. Press the *green key* or *Answer* if you would like to answer a call.
2. Press the *red key* or *silent* if you would like to reject a call, or for ending the connection after the call.

Earphone/Bluetooth Mode): When plugging the earphone (including Bluetooth earphone), you can answer a call by pressing the key on the earphone.

Operations during a call

Press the right Menu key for Hands free
Press left Menu key "*Options*" to perform following operation during a call:

End: End this Call.

Hold: Hold this call.

Phonebook: To go to *Phonebook*.

History calls: To go to *History calls*

Message: To go to *Messages*.

Mute: de/activate the microphone

Hands Free:

During a call you can turn the hands free equipment on (Loudspeaker on).or off with the right Menu key.

Menu

Press the up arrow key to go to the Menu. Scroll through the menu using the arrow keys.

- | | |
|-----------------------|------------------|
| 1. Phonebook | 4. FM-radio |
| 1. Contacts | 5. Organizer |
| 2. Add new contact | 1. Alarm |
| 3. Speed dial | 2. Calendar |
| 4. Direct Number | 3. Tasks |
| 5. Phonebook settings | 4. Calculator |
| 2. Message | 5. Torch |
| 1. Write SMS | 6. Services |
| | 7. Settings |
| | 1. Tone settings |
| | 2. SOS settings |

2. Inbox
3. Outbox
4. Drafts
5. Sent messages
6. Delete messages
7. Settings
3. Call history
 1. Missed call
 2. Dialed calls
 3. Received calls
 4. All calls
 5. Delete call logs

3. Phone settings
4. Call settings
5. Network settings
6. Security settings
7. Connectivity
8. Restore factory setting

Phonebook

You can store names and phone numbers in the Internal phone book (up to 200) and in the SIM phone book (SIM dependent, but a maximum of 250).

To access the phonebook:

In idle mode, press *Right soft key*.

In idle mode, press *Left soft key*, *Phonebook* and press *OK*

Note:  Indicates entries in SIM phone book,  Indicates entries in the Internal phone book.

Add new contact:

1. Press *left soft key* next press *Down* to open the phonebook and select *Add new contact*.
2. Select Preferred storage, *To SIM* or *To Phone*, If you choose *To phone*: you can edit *Name* and *Number*. Press *Options* and *Save* if you want to save the contact.

To edit (change) a Phone Book entry:

1. Press *Right soft key* to phone book search which one You want to change, press *Left soft key* select *Edit* then modify the name, press *Down* modify the number.
2. Press *Option* and *OK* to save the change(s).

To delete all entries from the phone or SIM card

1. Select *Menu, Phonebook* and press *Left soft key*.
2. Select *a Contact* and press *Left soft key*
3. Select *Mark several* and press *Left soft key*
4. Select *Delete marked* and press *Left soft key*
5. Select the contacts
6. Press *Left soft key* and select *Delete marked*
7. Press *Left soft key (Yes)* to confirm

Store a Phonebook entry to a Speed dial key (2-9)

1. Select *Menu*, *Phonebook* and press *Left soft key*.
2. Select *Speed dial* and Press *OK*
3. Set *Status* to *On*, press down to *Set numbers*.
4. Press *OK* the display shows ,2-9
5. Press *Up* or *Down* to choose the key to save to
6. Press *OK* to confirm the memory entry.

Direct Number:

1. Select *Menu*, *Phonebook* and press *Left soft key*.
2. Select *Direct Number* and press *Left soft key*.

Add *M1* and *M2* dial numbers.

Press in Standby mode *M1* or *M2* for call

Favorite contacts

In standby mode press Arrow key down

You can save until 5 contacts in the *Favorite contacts*.

The phone shows this contact on the screen.

Messages

You can receive and send *Messages*. Here you can also choose *Voice Mail*. These services are net-based services. Please contact your network operator before using.

1. Select *Menu, Messages* and press *OK*

Write message

You can write and send text messages. Invoicing is based upon how many ordinary messages are needed for any multi-part message.

Press the key marked with the letter that you want repeatedly until the letter appears.

1. Select *Write message* and press *left soft key*.
2. Enter contents and press *left soft key* to enter *Options*. (You can select *Send* and *Save*.)
3. Press *left soft key*, select *Send* and press *left soft key* again.
4. Select *Enter recipient* or *Contacts (from Phonebook)*.

5. Select telephone numbers.
6. Press *left soft key* to enter *Options* and press *left soft key* to *Send*

Inbox:

The *Inbox* is for storing received SMS messages. Depending on the selected mode, the phone vibrates or rings when you receive a new message. And in the standby mode you see this  icon until you have read the new SMS message.

You can choose the following options while reading your received SMS:

Delete, Reply, Forward and Advanced.

In the *Advanced* option: *Call sender* and *Use Number.*

Note: The new message icon keeps flickering in the standby mode when your inbox is full. Please delete some messages for receiving new messages.

Outbox:

The *Outbox* to view the messages you don't sent but saved.

Drafts:

By *Drafts* you can view the draft SMS messages you have saved.

Sent messages

The *Sent messages* to view the messages you sent.

You can choose the following options while reading your sent SMS:

Forward, Delete and Advanced.

In the *Advanced* option: *Call sender* and *Use Number.*

Settings

1. Select *Menu, Messages* and press *OK*
2. Select *Settings* and press *OK*

You can choose the following options:

SMS Settings

You can choose the following options:

Profile settings:

This setting is needed to use the SMS function. The *SMSC number* can be obtained.

Common settings:

Set on/off the *Delivery report*, *Reply path* and *Save Sent messages*.

Preferred storage:

Select *SIM* or *Phone* to store messages

Memory Status:

Check the capacity of messages storages.

Voice mail:

Voicemail is a service supplied by your network operator. For more information and for the voice mailbox number, contact your network operator. When you have a new voice mail message, your phone will receive a message.

1. Select *Menu, Messages* and press *OK*
2. Select *Settings* and press *OK*
3. Select *Voice mail* and press *OK*
4. Select *<Empty>* and press *Option*.
5. Select *Call* or *Edit*
6. If you select *Edit*, enter a *name* and the *number* of your voice mailbox number.
7. On the default screen: Press and hold the number 1 and your telephone will

call the corresponding number saved in the *Voicemail server*.

Note: This service must be supported by the network operator.

In standby mode:

Press and hold key number 1 for directly calling the *Voice mail*. Only the number saved under voice mail address 1 is called.

Call history

Missed Dialed and Received or All calls

1. Select *Menu*, *Call history* and press *OK*

The phone registers the phone numbers of *Missed*, *Received*, *Dialed* and *All calls*.

When you press *OK* by *Missed*, *Dialed* or *Received*, you can view the calls you *Missed*, *Dialed*, *Received* or *All Calls*. If you press *Option* you can choose the following options:

Call, *View*, *Send message*, *Save* and *Delete*.

Delete call logs:

You can delete all the records of the *Dialed*, *Missed* and *Received calls*, you can also choose delete *All calls* to delete all the records of the above-mentioned calls logs.

Organizer

Alarm

1. Select *Menu, Extras* and press *OK*
2. Select *Alarm* and press *OK*

You can set a maximum of 5 different alarms.

To set an alarm clock:

1. Select one alarm and press *Edit*.
2. *Edit alarm*: set *On* or *Off*, *Time*, *Snooze*, *Repeat*, *Alarm volume*, *Alarm tone* and *Alert type*.
3. Press *Save* to save the *Alarm*.

When alarm sounds, you can stop the alarm by pressing *Stop*. If you press *Snooze*, the alarm stops and rings after 10 minutes again.

Calendar

1. Select *Menu, Extras* and press *OK*
2. Select *Calendar* and press *OK*

On the calendar interface, press the Navi keys to browse through different days.

Tasks

1. Select *Menu, Extras* and press *OK*
2. Select *Task* and press *OK*

If there are some existed event in the task list, press the *up / down* key to select a event to get into the *options: View, Add, Edit, Delete, Delete overdue, Delete all* and *View uncompleted*

Calculator:

3. Select *Menu, Extras* and press *OK*
4. Select *Calendar* and press *OK*

The phone is provided with a calculator. This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

Function:

- The keys 1 to 0 insert a digit.
- To insert a decimal, press #.
- Press the up and down arrow key for +, -
- Press left and right key for x and ÷.

To get the result, press *left menu key*. Press and hold *right menu key* to clear the display for a new calculation.

FM-radio

FM-Radio

1. Select *Menu, Multimedia* and press *OK*
2. Select *FM-Radio* and press *OK*

Key	Function
Key right	0,1 frequency forward
Key left	0,1 frequency back
Arrow key up	Volume high
Arrow key down	Volume low
Number keys	Recalling the memorized channels

Enter *Options*, you can make the following operations:

Exit:

End the Radio mode

Channel List:

There are 30 channels for you to store.

Preset Auto Search:

Makes auto search for channels available and add them into the channel list for you to select.

Tune (Manual Input):

Inputs the FM frequency you prefer.

Settings:

Turn on *Background Play* and *Loudspeaker*.

Note: *Auto search needs some time, so please be patient.*

For better radio reception, connect a micro USB headset to the headset socket.

Settings

Tone settings:

1. Select *Menu, Settings* and press *OK*
2. Select *Tone Settings* and press *OK*

You can choose the following options:

Ring tone, Alert type, Ringtone volume, Ring type, Message tone, Message volume, Keypad tone and Keypad volume.

SOS

1. Select *Menu, Settings* and press *OK*
2. Select *SOS settings* and press *OK*

The SOS function is a simple function which can save lives at the deciding moment. In all, you can save 5 SOS numbers (relatives, neighbours, friends and rescue). These numbers, previously saved in order of sequence, will be automatically dialled in an SOS by pressing the *SOS button* on the back of the mobile phone. During the SOS call, a warning tone sounds so the person that you rang knows that it is an emergency! If you cannot get through on the first

number, the second number will be called automatically. If you cannot get through on the second number, the third number will be called etc.

If no emergency number is saved or your phone card has run out, or you are not allowed under a foreign network (e.g. Roaming not activated), you can dial 112 or another emergency number on the numerical keypad.

SOS description:

Press the *SOS button* on the back of the mobile phone for 3 seconds. If you want to stop or cancel the SOS call, press the *SOS button* again.

Functionality:

By pressing the *SOS button*, the phone will send an SOS SMS person (in case mobile number or telephones with SMS function is available for emergency contact) to the emergency numbers you have previously saved and will be automatically dialled in the given sequence. (The emergency button also functions when the phone is closed). The mobile phone switches on the hands free function at full volume and at the same

time, if the SOS call is not answered within 25 seconds the next number is dialled etc.

Note:

- If you want to stop or cancel the SOS call, press the *right menu key* or *SOS Key*.
- As a rule, the international emergency call 112 can still be called outside of the regional network of your network operator.
- When changing a phone card: Always make sure that there is sufficient credit on your phone card because private emergency numbers cannot be dialled without sufficient credit.

Attention: If the SOS call is forwarded to the voicemail, the SOS mode will end.

Attention: If you want to save SOS numbers such as the ambulance service, the police, fire brigade etc. as an SOS number, you must gain permission from each of these institutions beforehand. There will be no liability for possible costs arising from calling them by accident.

SOS setting:

SOS alarm: Set *On* or *Off* the SOS alarm tone function.

SOS numbers:

There you can edit and save at most five SOS number in your phone.

SOS message:

Edit the content of the SOS message which will be sent out automatically when the SOS function is using.

Phone settings:

1. Select *Menu, Settings* and press *OK*
2. Select *SOS Settings* and press *OK*

The following menu items are available:

Time and date:

Set *Home city and time and date*

Language:

Here you can choose the language you want in your display.

Pref. Input method:

Here you can choose the Input method you want for write.

Auto. Keypad lock

You can set the telephone such that the keypad automatically locks after a present time period.

Wallpaper:

Select your favourite picture as the wallpaper of the standby window.

Brightness:

LCD backlight for setting up the brightness

Call settings

1. Select *Menu, Settings* and press *OK*
2. Select *Call settings* and press *OK*

Depending on the network operator, you can use the following services:

Caller ID:

Set the function of caller ID:

Set by network

Hide ID

Send ID

Call waiting:

When this network service is activated, the network notifies you of a new

incoming call while you have a call in progress. Press *OK* to answer the waiting call. The first call is put on hold or press the *red key* to reject the call.

Call divert:

To divert your incoming calls to your voice mailbox or some other phone number (network service). Select the divert option you want. Several divert options may be active at the same time.

Call barring:

With this network service you can restrict the making and receiving of calls with your phone.

Call time reminder:

Choose to remind you *Periodic* (30-60 seconds) or select *Single* (1-3000 Seconds) or select *Off*.

Network settings

1. Select *Menu, Settings* and press *OK*
2. Select *Network settings* and press *OK*

This menu has connection with the network suppliers, so please get in touch with them when you use this function. If

you want to get into one network which doesn't have the roaming protocol with the original network you have been in, the phone will display the content that you can make an emergency call.

Network selection:

Depending on network operator support , you can choose the following options:

Set *automatic* or *manual mode*

Security settings

1. Select *Menu, Settings* and press *OK*
2. Select *Phone settings* and press *OK*.

You can choose the following options:

SIM security:

To turn your SIM PIN code *On* or *Off*,
change PIN and *change PIN2*.

Phone security:

To lock your phone with a password. The default password is: *0000*.

Change password:

Here you can change your password.

Connectivity:

1. Select *Menu, Settings* and press *OK*
2. Select *Connectivity* and press *OK*

You can connect wirelessly to other Bluetooth compatible devices.

Bluetooth:

You can choose the following options:

Power:

Here you can choose to turn Bluetooth *On* or *Off*.

Visibility:

you can set the visibility *on* or *off*.

My device:

List of saved devices and enables you to add new devices; *Search new device*.

Search audio device:

Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it now by pressing *Yes*.

Search audio device:

1. Press *OK*, the phone is going to search for new devices.
2. Select the devices you want to connect with and press *Pair*.
3. When connecting with another Bluetooth device you need a shared passcode. Enter the passcode and press *OK*.
4. Select the device from the list and press *Option*. Can choose the following options: *Connect, Rename, Delete* and *Delete all*.

My Name:

Here you can set the Bluetooth device Name.

Advanced:

Here you can set your: *Audio path, Storage* and check the *My address*.

Restore factory settings

1. Select *Menu, Settings* and press *OK*
2. Select *Restore factory settings* and press *OK*

To reset some of the menu settings to their original values. The password is:
0000

Basic Specifications

Network-Dual-Band	GSM 900/DCS1800
Dimension :	120 x 54 x 12,9 mm
Battery :	Li-ion 3.7V - 800mAh
Standby time:	up to 250 hours*
Talk time:	Up to 480 minutes*

**Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.*

FAQ

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or network operator.

Can't turn the phone on:

- Check battery installation, please install battery correctly.
- Check if battery level is low, try to charging the battery 24h.
- Change the battery (6 Month warranty)
- Check if entered incorrect PIN code 3 times in a row.

If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

SIM error:

- Is the SIM card dirty? Please clean it.
- Try and reinstall the SIM card.
- Is the SIM card damaged? Please contact your network operator.

Weak signal or no signal:

- You may be in a location where the reception is bad, such as tunnel or cellar, please relocate and try again.
- You can try turning around slightly or get near the window if you are in a room.
- Please contact your network operator, if you still have a weak signal or no signal.

Bad talking quality:

- Weak signal? See: Weak signal or no signal.
- Check if battery if battery is low. Charge the battery or change the battery.
- Use the up volume key to adjust the microphone volume during a call.

Can't make a call:

- Check if you enter the correct number and press *green key*.
- Check if you set call barring, if yes, please cancel it.
- Check if the SIM card is registered in the network.
- If your SIM card is a prepaid card, please make sure there is enough money on the card.

Can't receive calls:

- Is the SIM card registered in the network?
- Check if your phone is turned on.
- Check if screens shows no signal, if yes, see: Weak signal or no signal.
- Check if you set call barring, if yes, please cancel it.

Screen is dark:

- Check if battery if battery is low. Charge the battery or change the battery.
- Adjust the wallpaper.
- Your phone may be affected with damp, keep it dry.

PIN locked:

- Check if entered incorrect PIN code 3 times in a row.
If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

Tips: if all suggests and solutions can't solve your problem, please check Customer Service on www.beafon.com. Please do not disassembly or repair your phone without professional guide.

Battery

- Your phone is powered by a rechargeable battery.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.
- When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer.
- Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than 10 days, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Use the battery only for its intended purpose.

- Never use any charger or battery which is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries performance is particularly limited in temperatures well below freezing.
- Do not dispose of batteries in a fire!
- Dispose of batteries according to local regulations (e.g. recycling).
- Do not dispose as household waste.
- Do not charge your mobile phone if the battery is not installed.

Phone

Your phone is a product of superior design and craftsmanship and should be treated with care.

The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form

inside, which may damage electronic circuit boards.

- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the
- phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal.



Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



Road safety comes first
Do not use a hand-held phone while driving.



Switch off in aircraft
Wireless devices can cause interference in aircraft.



Switch off in hospitals
Follow any regulations or rules.
Switch the phone off near medical equipment.



Switch off when refuelling
Do not use the phone at a refuelling point. Do not use near fuel or chemicals.



Interference
All wireless phones may get interference, which could affect performance.

Traffic Safety:

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop. Remember road safety always comes first!

Operating environment:

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece.

Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices:

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers:

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference.

- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids:

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your network operator.

Other medical devices:

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Posted facilities:

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres:

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles:

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Certification information (SAR):

This model phone meets the EU requirements for exposure to radio waves.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg. Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

The highest SAR value for this device when tested at the ear was **0,598W/Kg**.

If you want a copy of the Declaration of Conformity, please contact us: info@beafon.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

Liability Disclaimer:

- Bea-fon Mobile GmbH shall not bear any liability for any relevant, indirect, special, incidental, or inevitable injuries caused by using of this product, including injuries which have been considered, or unconsidered, likely to happen.
- For any losses caused by natural disasters (such as earthquake, flood, etc.) or any acts or accidents (including deliberate or accidental misuses by the user under these accidents or other unusual circumstances) which are beyond our liability scope, non-responsibility should be accounted on us.

Information:

SL140 distributed by Beafon

For more Information, please visit the
Bea-fon Homepage: www.beafon.com or
contact us: support@beafon.com

Address:

BEAFON MOBILE GmbH
4722 Peuerbach
Enzing 4
Austria

V1.0



CE 0700