



ENGLISH

General Inquiries

<LG Customer Information Center>

0844-847-5847 or **+44-844-847-5847**

* Make sure the number is correct before making a call.

USER GUIDE
GT350



CE0168

P/NO : MMBB0000000(1.0) **G**

www.lg.com

Bluetooth QD ID B016400



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind disability person due to touch screen keypad.



GT350 User Guide

Congratulations on your purchase of the advanced and compact GT350 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Contents

Guidelines for safe and efficient use	6
Getting to know your phone	11
Open view	12
Installing the SIM and battery	14
Charging your phone	15
Memory card	16
Using your touch screen	17
Touch screen tips	17
Control the touch screen	17
Your home screen	18
The quick keys	19
The status bar	20
Changing your Status from the status bar	21
Using the Multi-tasking function	21
Calls	22
Making a call	22
Making a call from your contacts	22
Answering and rejecting a call	22
In-call options	23
Speed dialling	24
Making a second call	24
Using call divert	25
Using call barring	25
Changing the common call setting	26
Address book	27
Searching for a contact	27
Adding a new contact	27
Creating a group	27
Changing your contact settings	28
Messaging	29
Sending a message	29
Entering text	29
T9 mode	29
Setting up your email	30
Retrieving your emails	30
Sending an email using your new account	30
Changing your email settings	30
Message folders	31
Changing your text message settings	31
Changing your multimedia message settings	32
Changing your other settings	32
Orange Messenger	32
Camera	33
Getting to know the viewfinder	33
Taking a quick photo	34
After taking a photo	34
Using the advanced settings	35

Contents

Video camera.....	36	Transferring music onto your phone.....	44
Getting to know the viewfinder	36	Playing a song.....	44
Making a quick video	37	Creating a playlist	44
After making a video	37	FM Radio	45
Using the advanced settings.....	38	Searching for stations	45
Your photos and videos.....	39	Resetting channels.....	45
Viewing your photos and videos ...	39	Organiser.....	46
Capturing an image from a video..	39	Adding an event to your calendar..	46
Viewing your photos as a slide show	39	Adding an item to task list.....	46
Setting a photo as wallpaper.....	40	Using date finder	46
Editing your photos	40	Adding a memo.....	47
Multimedia.....	41	Setting your alarm.....	47
Pictures	41	Adding a city to your World clock..	47
Sending a photo.....	41	Voice recorder	47
Using an image.....	41	Recording a sound or voice	48
Printing an image	41	Using your calculator	48
Moving or copying an image	42	PC Sync	49
Sounds.....	42	Installing LG PC Suite on your computer	49
Using a sound	42	Connecting your phone and PC.....	49
Videos	42	Backing up and restoring the information on your phone	49
Watching a video	42	Viewing phone files on your PC.....	49
Sending a video clip	42	Synchronising your contacts	50
Transferring a file to your phone....	43	Synchronising the messages	50
Others	43		
Orange Music	43		

Orange World	51
Accessing the web	51
Using RSS reader	51
Using your phone as a modem.....	51
Settings	53
Personalising your profiles	53
Changing your screen settings	53
Changing your phone settings	53
Changing your connectivity settings.....	54
Using memory manager	55
Sending and receiving your files using Bluetooth.....	55
Changing your Bluetooth settings:.....	56
Pairing with another Bluetooth device.....	56
Using a Bluetooth headset.....	57
Software Upgrade	58
Accessories.....	59
Technical data	60

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GT350 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.540 W/kg (10 g) and when worn on the body is 0.568 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Efficient phone operation
- **Electronics devices**
- All mobile phones may get interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Guidelines for safe and efficient use

- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

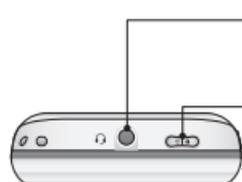

Handsfree or Stereo earphone connector

Power/Lock key

- Long press for power on/off.
- Short press to turn on/off the screen.




End key

Call key

- Dials a phone number and answers incoming calls.

Multitasking key

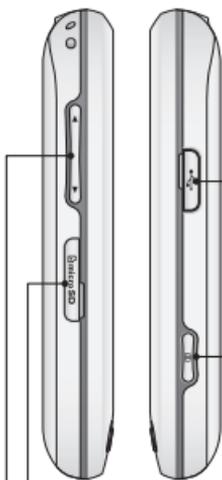

Charger, USB cable

Camera key

Micro SD memory card socket

Side keys

- When the screen is at the Home screen:
Ring tone and key tone volume.
- During a call:
Earpiece volume.

Open view



Change the text input mode
(capital/ small)

SMS

Alpha numeric keys

Symbol key

- Enters symbolic character

Space key

Use to enter a space when editing.

Social Network

Internet Full Browsing

Email

Instant Messenger


Enter key

Clear key

- Clears a character each time it is pressed. Hold the key down to clear all input.

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view

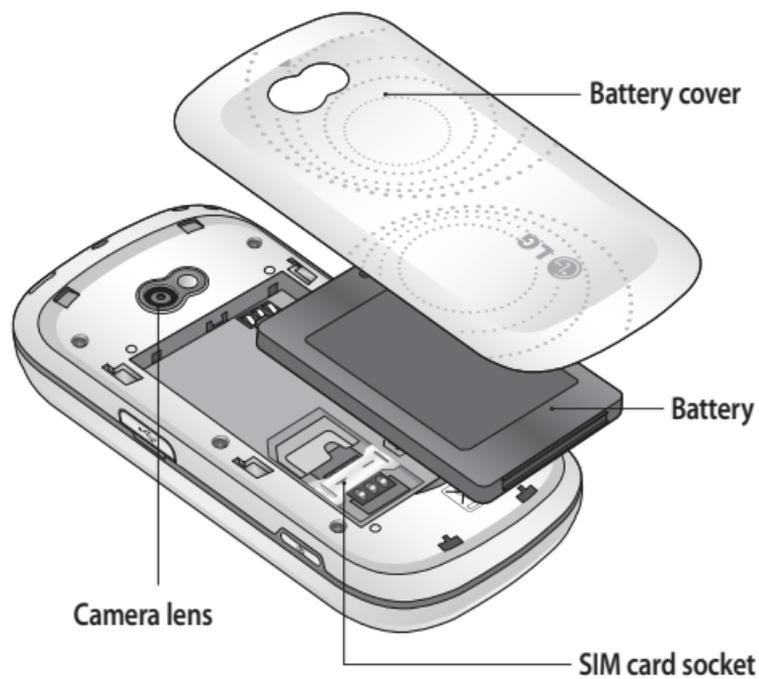

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



2 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently outwards.

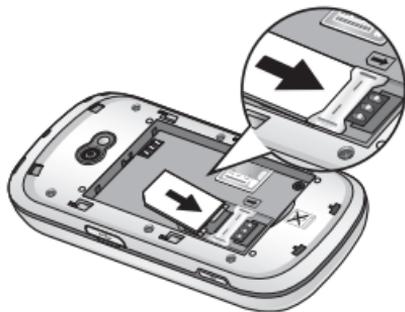


⚠ WARNING: Do not use your fingernail to remove the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the battery

Insert the top of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery until down it clicks into place.

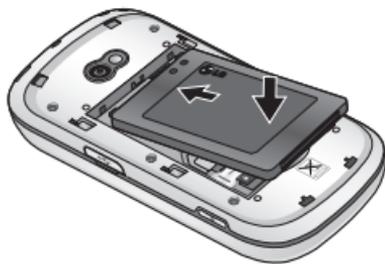

Charging your phone

Remove the charger socket cover on the side of your GT350. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GT350 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

- 1 Open the memory card slot cover on the left-hand edge of the phone.



- 2 Slide the memory card into the slot until it clicks into place. Make sure the gold contact area is facing downwards.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GT350 is not in use, it will return to the lock screen.

Control the touch screen



The controls on the GT350 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.

Scrolling

Drag from side to side to scroll. On some screens, such as the Recent History, you can also scroll up or down.

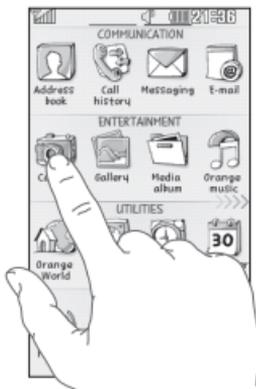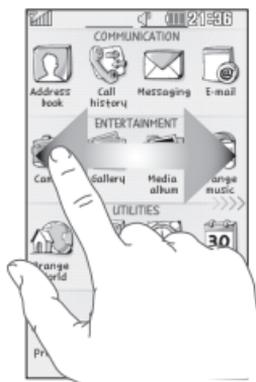

Your home screen

You can drag and click what you need right away in all home screen types.

Active



Widget home screen

When you touch  on the bottom right of the screen, the mobile widget panel appears. When you select widget and dragging it onto the screen, the

widget will appear on the home screen in the spot where it was dropped.

Active



Speed dial home screen

You can call, send a message or edit the contact directly in this home screen. When you touch , the speed dial list appears, and you can drag your speed dials

onto the screen.

Active



Livesquare home screen

On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call,

messaging or contacts function, select an avatar and choose the **Quick key** icon you want to use.

TIP! The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Address book**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.



Touch to open the full **Top menu** which is divided into four categories.

Your home screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	EDGE in use
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	Unread Emails in mail inbox

Icon	Description
	Send failed
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use

Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.



Using the Multi-tasking function

Short press the multi-tasking hard key  to open the Multitasking menu. From the Running App. tab you can view all the applications that are running and access them. You can launch and edit your Favourite applications from the Favourite Apps. tab.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the Smart key.

TIP! To enter + for making an international call, press and hold .

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts


- 1 From the home screen touch  to open the **Address book**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, touch the Smart key to answer the call.

To mute the ringing, slide up the lock screen. This will unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch **Reject** to reject an incoming call.

In-call options

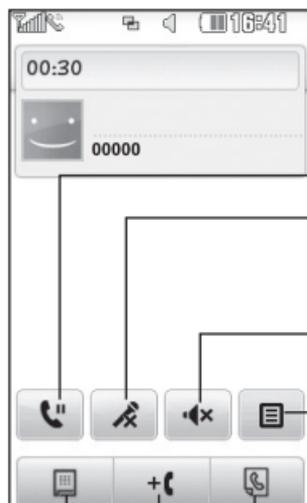

Hold - Touch  to put a call on hold.

Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch  to turn the speaker phone off.

Options - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

Calls

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Address book** in the **COMMUNICATION** tab and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Address book** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! Touch any single call log entry to view the date, time and duration of the call.

NOTE: You will be charged for each call you make.

Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
 - Deactivate all**
- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Calls

Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Answer mode - Choose whether to answer the phone using the Smart key or any key.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Address book

Searching for a contact

- 1 Touch **Address book** in the **COMMUNICATION** tab.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the **Name** field.

Or touch  from the home screen.

Adding a new contact

- 1 Touch **Address book** in the **COMMUNICATION** tab and touch **Create new contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager** and **Fax**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

Creating a group

- 1 Touch **Address book** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Create new group** or touch  and select **Create new group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Address book**.

Address book

Changing your contact settings

You can adapt your contact settings so that your **Address book** suits your own preferences.

- 1 Touch **Address book** in the **COMMUNICATION** tab and touch , then touch **Settings**.
- 2 From here, you can adjust the following settings:

Contact list settings - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.

Send all contacts via Bluetooth
- Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Performs a backup your contacts on to the external memory. This option requires external memory.

Restore contacts - Restores your contacts from the external memory. This option requires external memory.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

Messaging

Messaging

Your GT350 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send when ready**.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are two ways to enter text:

Touch keypad and **Qwerty**.

Touch to turn on  mode.

This mode is only used when you have Keypad as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Messaging

Setting up your email

Touch **E-mail** in the **COMMUNICATION** tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Retrieving your emails

You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch the account you want to use.
- 3 Touch **Inbox**.
- 4 Touch  and select **Retrieve** or **Synchronisation**.

Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts - Set up the Email account.

Preferred e-mail - Select the email account you want to use.

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GT350 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Choose the signature for E-mail and MMS you want to set. You can register one or more of signatures.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

There are five folders in Messaging menu.

Inbox - All the messages you receive are placed into your inbox.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Messaging

Changing your multimedia message settings

Touch **Messaging** in the COMMUNICATION tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Creation mode - Choose your message mode.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging** in the COMMUNICATION tab. And touch **Settings**.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Orange Messenger

You can chat to other people using this menu. Orange Messenger can only be used with a supporting SIM and country.

NOTE: This service is not available in all countries. Please contact your service provider for further information.

Camera

Getting to know the viewfinder

Exposure - This defines the difference between light and dark in an image.

Zoom - zoom in or zoom out. This function is enabled depending on the picture size you take.



Back

Taking a photo

Video mode - Slide down this icon to switch to video mode.

Gallery - This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the five numerical options: 2M (1600x1200), 1M (1280x960), VGA (640x480), Home screen (WQVGA), QVGA (320x240).

Continuous shot - This enables you to take 3/6/9 shots automatically in very quick succession.

TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Camera

Taking a quick photo


- 1 Long press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the  key on the side of the phone firmly.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen, Contacts image, Startup image or Shutdown image.
-  Touch to edit the photo.
-  Touch to edit the name of the captured picture.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The "Deleted" message appears.
-  Touch to open your gallery.

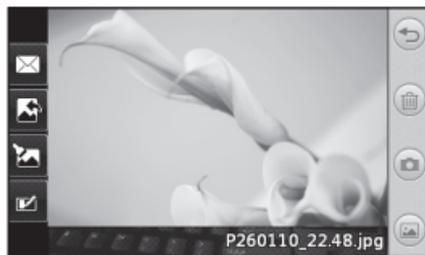

Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Colour Effect - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

White balance - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Night mode - Useful to use in dark places.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

View mode - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose to view the picture with options after taking a photo.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.


Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Reset settings - Reset all the camera settings.

Video camera

Getting to know the viewfinder

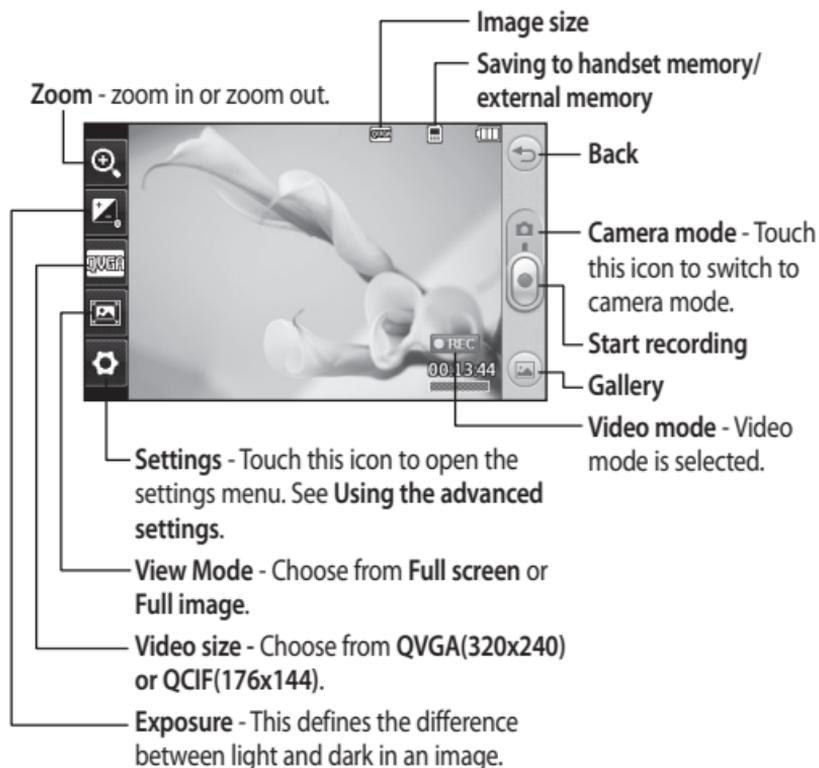

TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Making a quick video

- 1 Long press the camera key on the right side of the phone for a few seconds.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides .

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth** or **YouTube**. Please check with your service provider to confirm which profile to use when uploading content to Youtube. (Charges may apply)
-  Touch to edit the video.
-  Touch to edit the name of the selected picture.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.

Video camera



Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

Colour Effect - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy.**

Quality - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Reset settings - Reset all the video camera settings.

Your photos and videos

Viewing your photos and videos

- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.

- 5 Touch  to return to the video.
- 6 The image will be saved in your **Media album** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.

There are options within slideshows:

- Touch  to go back.
-  Touch to pause the slideshow on a particular photo.
-  Touch again to resume playback.
-  Touch to show random.
-  Touch to increase or decrease the speed of the slideshow.

Your photos and videos

Setting a photo as wallpaper

- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.

Editing your photos

- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:

 Move your finger across the screen to select the area.

 Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.

 Add writing to the picture.

 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.

 Erase whatever you draw. You can also select the eraser size.


 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.

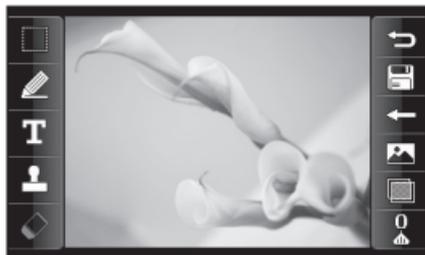

Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **Media album** in the ENTERTAINMENT tab.

Pictures

Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo

- 1 Touch **Media album** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message, Email, Bluetooth**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **Media album** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Use as** and choose from:
 - Homescreen image** - Set a wallpaper for the home screen.
 - Lock screen image** - Set a wallpaper for the lock screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.
 - Shut down image** - Set an image to appear when you switch the phone off.

Printing an image

- 1 Touch **Media album** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print via Bluetooth**.

Multimedia

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch **Media album** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Move** or **Copy**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

- 1 Touch **Media album** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you want. It will begin to play.
- 3 Touch  and select **Use as**.
- 4 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.

Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **Media album** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  to send the video as a Message or Email or by Bluetooth or YouTube. Please check with your service provider to confirm which profile to use when uploading content to Youtube. (Charges may apply)

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **My folder** as a default, the second tab in **Media album**. You may overlook the file if the folder is full.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

Orange Music

Your LG GT350 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Orange Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Multimedia

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Orange Music > All tracks**.

Playing a song

- 1 Touch **Orange Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Orange Music** menu. You may touch more than once to return to the menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Orange Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

FM Radio

Your LG GT350 has an FM radio feature so you can tune into your favourite stations to listen on the move.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Organiser

Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to task list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Tasks** and touch **Add tasks**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your **memo**, then touch **Save**.
- 4 Your **memo** will then appear on the screen in the **Memo** application.

Setting your alarm

- 1 Touch **Alarms** in the UTILITIES tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Select day**.
The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .

- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.

Adding a city to your World clock

- 1 Touch **World clock** in the UTILITIES tab.
- 2 Touch the , followed by **Add city**.
- 3 Scroll the globe, touch the area you want and choose the city on the map.
- 4 Or touch the  and type the name of the city you require in the search field box.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Organiser

Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

Duration - Set the recording duration. Choose from **No limit**, **MMS** or **1 min**.

Quality - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use - Select where to save the audio files. Choose between External memory and Handset memory.

Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

Using your calculator

- 1 Touch **Calculator** in the UTILITIES tab.
- 2 Touch the numeric keys using the keypad to input numbers.
- 3 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.

- 4 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.

3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Back & Restore** at the right-bottom of PC suit tool. icon, and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click to start a backup or began to recover.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the icons which you want to manage. You can view all the files in your phone by selecting each category.

PC Sync

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Address book** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

Synchronising the messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your PC and phone messages will be displayed in folders on the screen.
- 4 Use the toolbar at the top of the screen to edit and rearrange messages.

WARNING Do not disconnect your phone during the transfer.

Orange World

Orange World gives you a fast, full colour world of games, music, news, sport, entertainment and lots more, straight to your mobile phone. Wherever you are and whatever you like.

Accessing the web

- 1 Touch the **Orange World** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full

text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Using your phone as a modem

Your GT350 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GT350 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **InternetKit** on your PC. Then click **New button** and select **Modem**.

Orange World

- 4 Write the Profile that can connect to the Internet and save the values.
- 5 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GT350.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GT350.
- 2 Pair your PC and GT350 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New button**.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GT350.

Settings

Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the SETTINGS tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

Changing your screen settings

Touch **Screen settings** in SETTINGS tab.

Screen settings

Wallpaper - Choose the background image for your Widget homescreen, Speed dial homescreen or Lock screen.

Widget home template - Choose the template for your Widget home screen.

Livesquare - Touch Livesquare guide to check its functions. You can also adjust the following settings:

Liveplace - live square background

Livecon - Human or animal

Daily reset - on/off

History - selecting  deletes you Livesquare history

Top menu - Choose the style of the top menu, choose either **Zigzag**, **Scrolling** or **Screen by screen**.

Lock screen - Choose the style of Lock screen.

Dialling - Choose the style of dialling screen and adjust the font style only for your dialling screen.

Font - Choose the font size and style.

Brightness - Adjust the screen brightness.

Greeting message - Choose **ON** or **OFF** and fill in the greeting message in the text field.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your GT350 works for your own style.

Touch **Phone settings** in the SETTINGS tab, then choose from the list below.

Settings

Phone settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings on/off or Night only.

Languages - Change the language of your GT350's display.

Auto keylock - Lock the keypad automatically in the Home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

Memory info - See **Using memory manager** for more information.

Reset settings - Restores all settings to their factory defaults.

Information - Select **Help** to view the technical information for your GT350. And you can upgrade software with **Handset information**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new

phone immediately. To change any settings, use this menu:

Touch **Connectivity** in the **SETTINGS** tab.

Network settings

Select network - If you select **Automatic**, the GT350 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Preferred lists - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a Data service from the options and synchronise your GT350 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use Music sync with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Using memory manager

Your GT350 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

Handset common memory - View the memory available on your GT350 for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, Task list,

Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between Handset and External memory.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GT350 will not automatically search for other **Bluetooth** devices. If not, your GT350 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.

Settings

5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **Media album**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GT350.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GT350 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GT350 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to **Connect now**. Your GT350 will automatically switch to Headset profile.

Software Upgrade

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are available for use with the GT350.

Charger



Data cable



Battery



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 /GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment	
Model Name	GT350	
Trade Name	LG	
CE 0168		
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 V1.8.1/ EN 301 489-07 V1.3.1/ EN 301 489-17 V1.3.2		
EN 60950-1 : 2001		
EN 50360: 2001/ EN 62209-1: 2006		
EN 300 328 V1.7.1		
EN 301 511 V9.0.2		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Seung Hyoun, Ji / Director	02. Mar. 2010
LG Electronics Logistics and Services B.V. Veluwezoom 15, 1327 AE Almere, The Netherlands	 Signature of representative	

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.
- (2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.
- (3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.
- (4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, or their designated service agent the consumer must provide information to reasonably prove the date of purchase.
- (6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.
- (7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

2. WHAT THIS WARRANTY DOES NOT COVER :

- (1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number or IMEI number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Suspected defects caused by a failure of the cellular network.

3. CONDITIONS:

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.



LG Electronics Inc.

